MITSUBISHI

CL2Y16-TP1M1V
CC-Link/LT Remote I/O Module

Thank you very much for purchasing this product.
Please read this manual thoroughly before starting to use the product and handle the product properly.

User's Manual

CC-Link/LT

MODEL	CL2Y16-TP1M1V-U
MODEL Number	13JP08
IB(NA)-0800238-A(0206)MEE	

© 2002 MITSUBISHI ELECTRIC CORPORATION

●SAFETY PRECAUTIONS●

(Read these precautions before using.)

Please read this manual carefully and pay special attention to safety in order to handle this product properly. Also pay careful attention to safety and handle the module properly.
These precautions apply only to Mitsubishi equipment. Refer to the user's manual of the CPU module to use for a description of the PLC system safety precautions.
These ● SAFETY PRECAUTIONS ● classify the safety precautions into two categories: "DANGER" and "CAUTION".

⚠ DANGER	Procedures which may lead to a dangerous condition and cause death or serious injury if not carried out properly.
⚠ CAUTION	Procedures which may lead to a dangerous condition and cause superficial to medium injury, or physical damage only, if not carried out properly.

Depending on circumstances, procedures indicated by ⚠**CAUTION** may also be linked to serious results.
In any case, it is important to follow the directions for usage.
Store this manual in a safe place so that you can take it out and read it whenever necessary. Always forward it to the end user.

[DESIGN PRECAUTIONS]

⚠ DANGER

- Refer to Chapter 3 of this manual for the operation status of the module in case a communication error occurs in the data link.
- Output could be switched on or off when a problem occurs in the remote I/O modules. So build an external monitoring circuit that will monitor any output signals that could cause a serious accident.

⚠ CAUTION

- Do not have control cables and communication cables bundled with or placed near by the main circuit and/or power cables. Wire those cables at least 100mm(3.94 inch) away from the main circuit and/or power cables. It may cause malfunction due to noise interference.

[INSTALLATION PRECAUTIONS]

⚠ CAUTION

- Use the module in an environment that meets the general specifications contained in this manual. Using this module in an environment outside the range of the general specifications could result in electric shock, fire, erroneous operation, and damage to or deterioration of the product.
- Do not directly touch the module's conductive parts. Doing so could cause malfunction or trouble in the module.
- Securely fix the module in place using the DIN rail. If the module is not securely fixed, it may fall off or cause malfunction.

[WIRING PRECAUTIONS]

⚠ DANGER

- Perform installation and wiring after disconnecting the power supply at all phases externally. If the power is not disconnected at all phases an electric shock or product damage may result.

⚠ CAUTION

- Wire the module correctly upon verifying the product's rated voltage and the connector pin arrangement. Connecting to a power supply different from rating or miss-wiring may cause fire and/or product failure.
- Make sure foreign objects do not get inside the module, such as dirt and wire chips. It may cause fire, product failure or malfunction.

[STARTING AND MAINTENANCE PRECAUTIONS]

⚠ DANGER

- Before cleaning the module, be sure to shut off all the phases of the power supply externally. Failure to do so may cause failure or malfunction of the modules.

⚠ CAUTION

- Do not disassemble or modify the module. Doing so may cause failure, malfunction, injury, or fire.
- The module case is made of resin; do not drop it or subject it to strong shock. A module damage may result.
- Make sure to switch all phases of the external power supply off before installing or removing the module to/from the panel. Failure to do so may cause failure or malfunction of the modules.

[DISPOSAL PRECAUTIONS]

⚠ CAUTION

- When disposing of this product, treat it as industrial waste.

1. Overview

This user's manual explains specifications and names of individual parts of the CL2Y16-TP1M1V type CC-Link/LT remote I/O module (hereinafter abbreviated as remote I/O module).

2. Specifications

2.1 General Specifications

The General specifications for the remote I/O module are shown in the following table.

Item	Specifications					
Operating ambient temperature	0 to 55℃					
Storage ambient temperature	-25 to 75℃					
Operating ambient humidity	5 to 95%RH, non-condensing					
Storage ambient humidity	5 to 95%RH, non-condensing					
Vibration resistance	Conforming to JIS B 3502, IEC 61131-2		Frequency	Acceleration	Amplitude	Sweep count
		Under intermittent vibration	10 to 57Hz	———	0.075mm (0.003in.)	10 times each in X, Y, Z directions (for 80 min.)
			57 to 150Hz	9.8m/s²	———	
		Under continuous vibration	10 to 57Hz	———	0.035mm (0.001in.)	
			57 to 150Hz	4.9m/s²	———	
Shock resistance	Conforming to JIS B 3502, IEC 61131-2 (147 m/s², 3 times in each of 3 directions X, Y, Z)					
Operating ambience	No corrosive gases					
Operating altitude	2000m (6562ft.) max.					
Installation location	Inside control panel *3					
Overvoltage category *1	II max.					
Pollution level *2	2 max.					

*1 : This indicates the section of the power supply to which the equipment is assumed to be connected between the public electrical power distribution network and the machinery within premises. Category II applies to equipment for which electrical power is supplied from fixed facilities.
The surge voltage withstand level for up to the rated voltage of 300 V is 2500 V.
*2 : This index indicates the degree to which conductive material is generated in terms of the environment in which the equipment is used.
Pollution level 2 is when only non-conductive pollution occurs. A temporary conductivity caused by condensing must be expected occasionally.
*3 : It can also be used in an environment other than on the control panel if the conditions such as usage ambient temperature and humidity are satisfied.

2.2 Performance specifications

The performance specifications for the remote I/O module are shown in the following table.

Item \ Type		CL2Y16-TP1M1V
Number of outputs		16 points
Isolation method		Photocoupler isolation
Rated load voltage		12/24V DC
Operating load voltage range		10.2 to 28.8V DC (ripple ratio: within 5%)
Max. load current		0.1A/point 1.6A/1 common
Max. inrush current		0.7A 10ms or lower
Leakage current at OFF		0.1mA or lower
Voltage drop at ON		0.3V or lower (TYP.) 0.1A, 0.6V or lower (MAX.) 0.1A
Output method		Sink type
Protect function		Overload protection function ,Overheat protection function
Response time	OFF →ON	0.5ms or lower
	ON →OFF	0.5ms or lower (Resistive load)
Surge suppression		Zener diode
Common wiring method		16 points/1 common (MIL connector 1-wire type)
Number of stations occupied		In 4-point mode: Occupies 4 stations, In 8-point mode: Occupies 2 stations, In 16-point mode: Occupies 1 station
External power supply of the output part	Voltage	10.2 to 28.8V DC (ripple ratio : within 5%)
	Current consumption	15mA or lower (When 24V DC and all point is on) Not including external load current
Module power supply	Voltage	20.4 to 28.8V DC (ripple ratio : within 5%)
	Current consumption	50mA or lower (When 24V DC and all point is on)
Noise durability		DC type noise voltage 500Vp-p, noise width 1μs, noise carrier frequency 25 to 60Hz (noise simulator condition) First transient/noise burst IEC 61000-4-4 : 1kV
Withstand voltage		500V AC for 1 minute between primary (external DC terminal) and secondary (internal circuit)
Insulation resistance		10MΩ or more between primary (external DC terminal) and secondary (internal circuit) when measured with a 500V DC insulation resistance tester
Protection class		IP2X
Weight		0.05kg
I/O part connection method		20 pin MIL connector
Module installation method		DIN rail installation, Can be installed in six directions

3. Part Names

This section explains the names of the components for the remote I/O module.

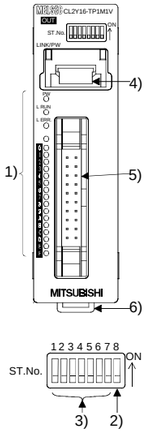

Connector for I/O interface	Pin No.	Signal name	Pin No.	Signal name
20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1	CON1-20	Y0	CON1-19	Y8
	CON1-18	Y1	CON1-17	Y9
	CON1-16	Y2	CON1-15	YA
	CON1-14	Y3	CON1-13	YB
	CON1-12	Y4	CON1-11	YC
	CON1-10	Y5	CON1-9	YD
	CON1-8	Y6	CON1-7	YE
	CON1-6	Y7	CON1-5	YF
	CON1-4	COM-	CON1-3	COM-
	CON1-2	CTL+	CON1-1	CTL+

Connector for CC-Link/LT interface	Pin No.	Signal name
LINK/PW 4 3 2 1	1	+24V
	2	DA
	3	DB
	4	24G

No.	Item	Description	
1)	Operating status indicator LEDs	LED name	Confirmation details
		PW	On: Power supply on. Off: The power supply is turned off or the voltage drop is too large.
		L RUN	On: Normal communication. Off : Communication cutoff (time expiration error).
		L ERR.	On: Indicates that a communication data error has occurred or the setting switch is outside the allowable range. Flicker at regular intervals: Indicates that the setting switch has been changed while current is being conducted. (The module continues to operate even while the LED is flickering. The changed settings will be reflected when the power has been restored.) Flicker at irregular intervals: Indicates that the terminal resistor is left unconnected or that the module or connection cable are affected by noise. Off: Normal communication.
		0 to F	Displays the ON/OFF status of the output (turned on in the ON status and turned off in the OFF status).
2)	Output hold setting switch * (SW8)	Specifies whether to maintain or turn off the output of the remote I/O module in case the communication stops. The switch is set to OFF at shipment from the factory. ON: Maintain output OFF: Turn output off	
3)	Station number setting switches * (SW1 to 7)	Select "10", "20" or "40" to set the ten's place of the station number. Select "1","2","4" or "8" to set the one's place of the station number. All switches are set to OFF at shipment from the factory. Always set the station number within the range of 1 to 64. A setting error occurs and "L ERR." LED flickers if the value outside the range 1 to 64 is set. (Example) Set the switches as below when setting the station number to 32:	
4)	Connector for CC-Link/LT interface	Connector for CC-Link/LT communication line and module power supply.	
5)	Connector for I/O interface	MIL connector for connecting output signal, load power supply and external power supply of the output part.	
6)	Hook for DIN rail	Hook for installing the module on a DIN rail.	

Station number	Ten's place			One's place			
	40 (SW1)	20 (SW2)	10 (SW3)	8 (SW4)	4 (SW5)	2 (SW6)	1 (SW7)
32	OFF	ON	ON	OFF	OFF	ON	OFF

* Set up using a slotted screwdriver with a tip width of 0.9 mm or less.

4. Handling Precautions

(1) When using a DIN rail, attach the DIN rail after taking the following items into consideration:
  (a) Applicable DIN rail types (conform to JIS C 2812)
    TH35-7.5Fe
    TH35-7.5Al
  (b) Interval between the DIN rail's installation screws
    Tighten the screws using a pitch of 200mm (7.87in.) or less when attaching a DIN rail.
(2) To attach the remote I/O module to the DIN rail, press the centerline area of the DIN rail hook beneath the module until a click is heard.
(3) When installing the remote I/O module into a panel, etc., provide 15mm (0.59 in.) or more of space between the top and bottom of the module and other structures or parts so that good ventilation and ease of operation when exchanging modules can be secured.

5. Wiring

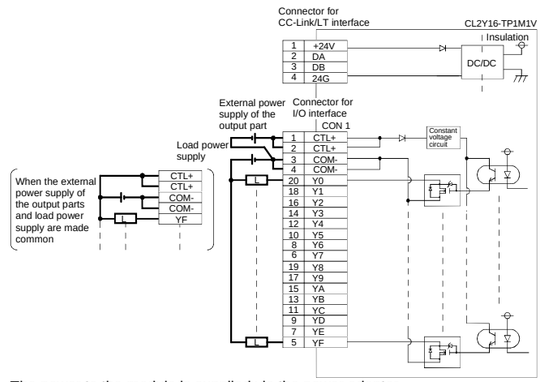

The power to the module is supplied via the power adapter.

6. External Dimensions

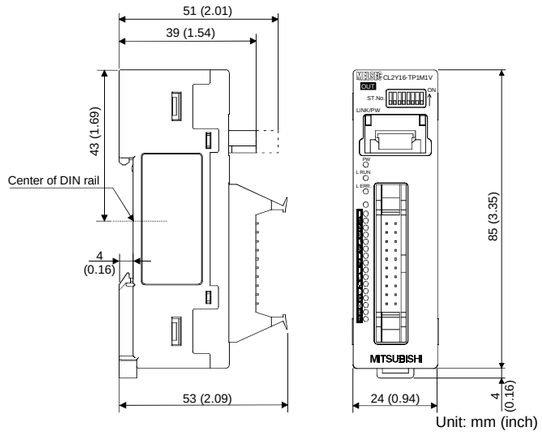

Unit: mm (inch)

Warranty

Mitsubishi will not be held liable for damage caused by factors found not to be the cause of Mitsubishi; machine damage or lost profits caused by faults in the Mitsubishi products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi; damages to products other than Mitsubishi products; and to other duties.

⚠For safe use

- This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.
- Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi.
- This product has been manufactured under strict quality control. However, when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.

Country/Region	Sales office/Tel	Country/Region	Sales office/Tel
U.S.A	Mitsubishi Electric Automation Inc. 500 Corporate Woods Parkway Vernon Hills, IL 60061 Tel : +1-847-478-2100	China	Ryoden International Shanghai Ltd. 3F Block5 Building Automation Instrumentation Plaza 103 Cao Bao Rd. Shanghai 200233 China Tel : +86-21-6475-3228
Brazil	MELCO-TEC Rep. Com.e Assessoria Tecnica Ltda. Av. Rio Branco, 123-15 ,and S/1507, Rio de Janeiro, RJ CEP 20040-005, Brazil Tel : +55-21-221-8343	Taiwan	Setsuyo Enterprise Co., Ltd. 6F., No.105 Wu-Kung 3rd.RD, Wu-Ku Hsiang, Taipei Hsine, Taiwan Tel : +886-2-2299-2499
Germany	Mitsubishi Electric Europe B.V. German Branch Gothaer Strasse 8 D-40880 Ratingen, GERMANY Tel : +49-2102-486-0	Korea	HAN NEUNG TECHNO CO.,LTD. 1F Dong Seo Game Channel Bldg., 660-11, Deungchon-dong Kangsec-ku, Seoul, Korea Tel : +82-2-3660-9552
U.K	Mitsubishi Electric Europe B.V. UK Branch Travellers Lane, Hatfield, Herts., AL10 8XB,UK Tel : +44-1707-276100	Singapore	Mitsubishi Electric Asia Pte, Ltd. 307 ALEXANDRA ROAD #05-01/02, MITSUBISHI ELECTRIC BUILDING SINGAPORE 159943 Tel : +65-473-2480
Italy	Mitsubishi Electric Europe B.V. Italian Branch Centro Dir. Colleoni, Pal. Perseo - Ingr.2 Via Paracelso 12, 20041 Agrate B., Milano, Italy Tel:+39-039-60531	Thailand	F. A. Tech Co.,ltd. 898/28,29,30 S.V.City Building,Office Tower 2,Floor 17-18 Rama 3 Road, Bangkpongpang, Yannawa, Bangkok 10120 Tel : +66-2-682-6522
Spain	Mitsubishi Electric Europe B.V. Spanish Branch Carretera de Rubi 76-80 08190 - Sant Cugat del Valles, Barcelona, Spain Tel:+34-935-653135	Indonesia	P. T. Autoteknindo SUMBER MAKMUR Jl. Muara Karang Selatan Block A Utara No.1 Kav. No.11 Kawasan Industri/ Pergudangan Jakarta - Utara 14440 Tel : +62-21-663-0833
South Africa	Circuit Breaker Industries LTD. Private Bag 2016, Isando 1600, Johannesburg, South Africa Tel : +27-11-928-2000	India	Messung Systems Put,Ltd. Electronic Sadan NO:111 Unit No15, M.I.D.C BHOSARI,PUNE-411026 Tel : +91-20-7128927
Hong Kong	Ryoden Automation Ltd. 10th Floor, Manulife Tower, 169 Electric Road, North Point, HongKong Tel : +852-2887-8870	Australia	Mitsubishi Electric Australia Pty. Ltd. 348 Victoria Road, PostalBag, No 2, Rydalmere, N.S.W 2116, Australia Tel : +61-2-9684-7777

MITSUBISHI ELECTRIC CORPORATION
HEAD OFFICE: 1-8-12, OFFICE TOWER Z 14F HARUMI CHUO-KU 104-6212, JAPAN
NAGOYA WORKS: 1-14, YADA-MINAMI5, HIGASHI-KU, NAGOYA, JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.
Printed in Japan on recycled paper.